


SPECIFICATION

Material



Aluminum




DIMENSION:

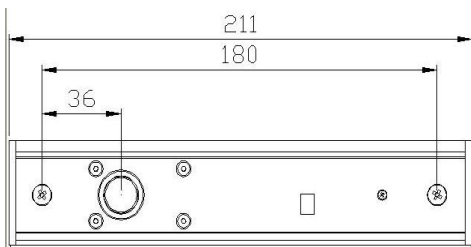


LK1201A -AV(LONG MODEL)

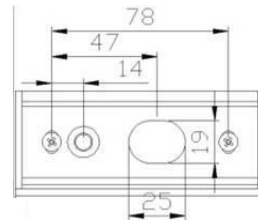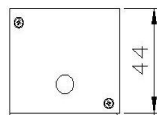

LK1201A -AV(SHORT MODEL)

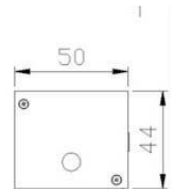

ASSEMBLY:

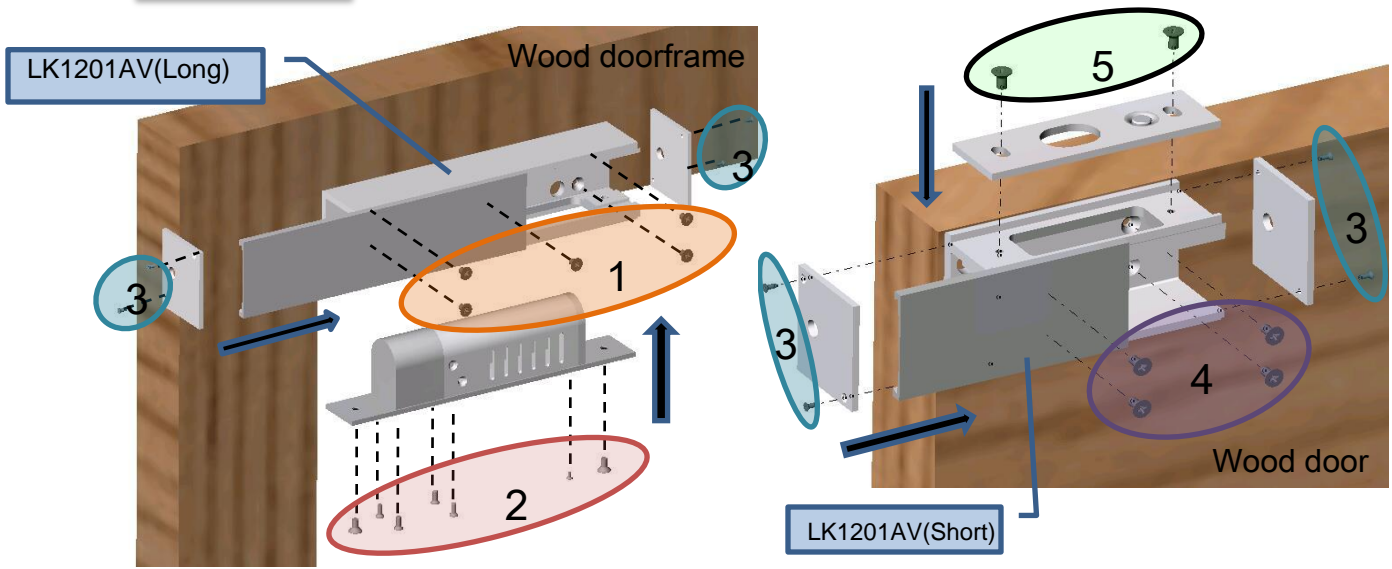

	SECTION 1	SECTION 2	SECTION 3	SECTION 4	SECTION 5
M2	×	FLAT HEAD SCREW×1	×	×	×
M3	×	HEX SOCKET CAP SCREWS×4	FLAT HEAD SCREWS×4	×	×
M4	FLAT HEAD SCREWS×5	FLAT HEAD SCREWS×2	×	FLAT HEAD SCREWS×4	FLAT HEAD SCREWS×2

★ CAUTION

- 1.Re-check the bolt is not on duty and proper direction.
- 2.Make sure the wire(+、-) is not uncrowded or wrong direction.
- 3.The temperature of electronic current have to keep under 50℃.If not, the fuse will not be operate.